



Instruction Sheet Bottom Curtain - Front & Ends

Replacement parts can be obtained from any Bolton Furniture authorized dealer

249 Professional Drive, Morrisville, VT
Phone: 802-888-7974
Fax: 802-888-3668
Web Site: www.boltonfurniture.biz

PARTS LIST

NO.	Drawing	Description	Qty.
A		Front Curtain	1
B		End Curtain	1

Full Filler Attachment

Step 1

Complete Assembly of Low Loft

Step 2 -

Open boxes and verify that all parts are included.


Step 3 - Attach Bottom Curtain Front and Ends

Detach strip of Velcro from Front Curtain (A). Starting at one end of bed, peel off small section of protective strip at a time and adhere Velcro under cleat on siderail. Make sure Velcro strip is centered from left to right on side rail.

Center Front Curtain (A) between bed ends and Attach to Velcro.

Detach strip of Velcro from End Curtain (B). Starting at one end of Bed End, peel off protective strip and adhere Velcro to Bed Ends. Make sure Vecro is centered left to right, lines up with Velcro for front curtain and is level before adhering to surface.

Center End Curtain (B) on bed ends and attach to Velcro.

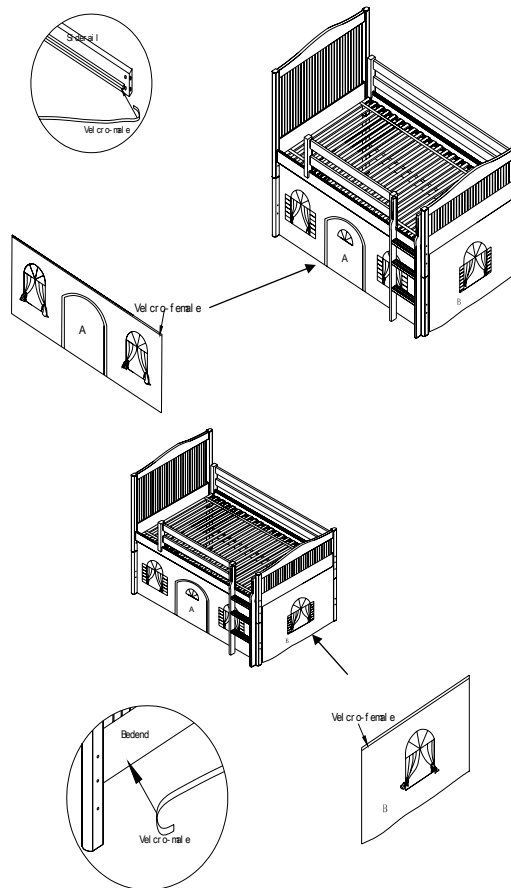

Note: For Full Beds See instructions for Full Filler before attaching End Curtain (B).