


Instruction Sheet Full Filler

Replacement parts can be obtained from any Bolton Furniture authorized dealer

PARTS LIST

NO.	Drawing	Description	Qty.
A		Full Filler	1

Full Filler Attachment

Step 1


Complete Assembly of Low Loft

Step 2

Complete Assembly / Attachment of Front Curtain


Step 3 - Attach Bottom Curtain Front and Ends

Detach strip of Velcro from End Curtain (B). Starting at front side of Bed End, peel off protective strip and adhere Velcro to Bed Ends. Line up Velcro on bed ends to Velcro on side rail and make sure Velcro is level before adhering to surface.

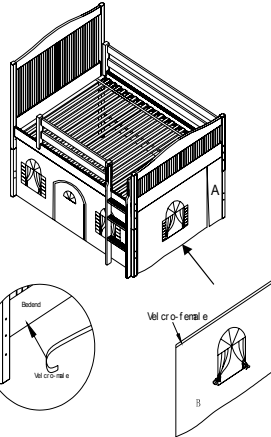

Attach End Curtain (B) on bed ends to Velcro.

Detach strip of Velcro from Full Filler (A). Starting at back side of Bed End, peel off protective strip and adhere Velcro to Bed Ends. Line up Velcro to Velcro on side rail and the Velcro attached for End Curtain. Make sure Velcro is level before adhering to surface.

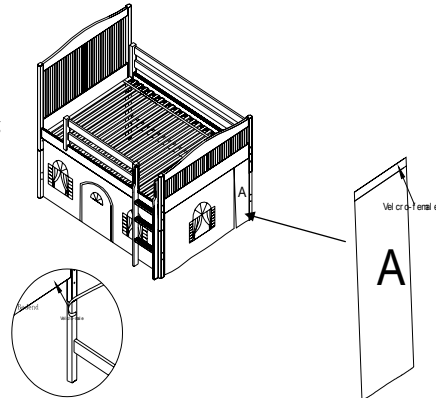

Attach Full Filler (A) to Velcro.
